

RP76


Driver Setup Manual

一、Windows Driver Installation




Double click the installation icon


Then, it will show as below picture:

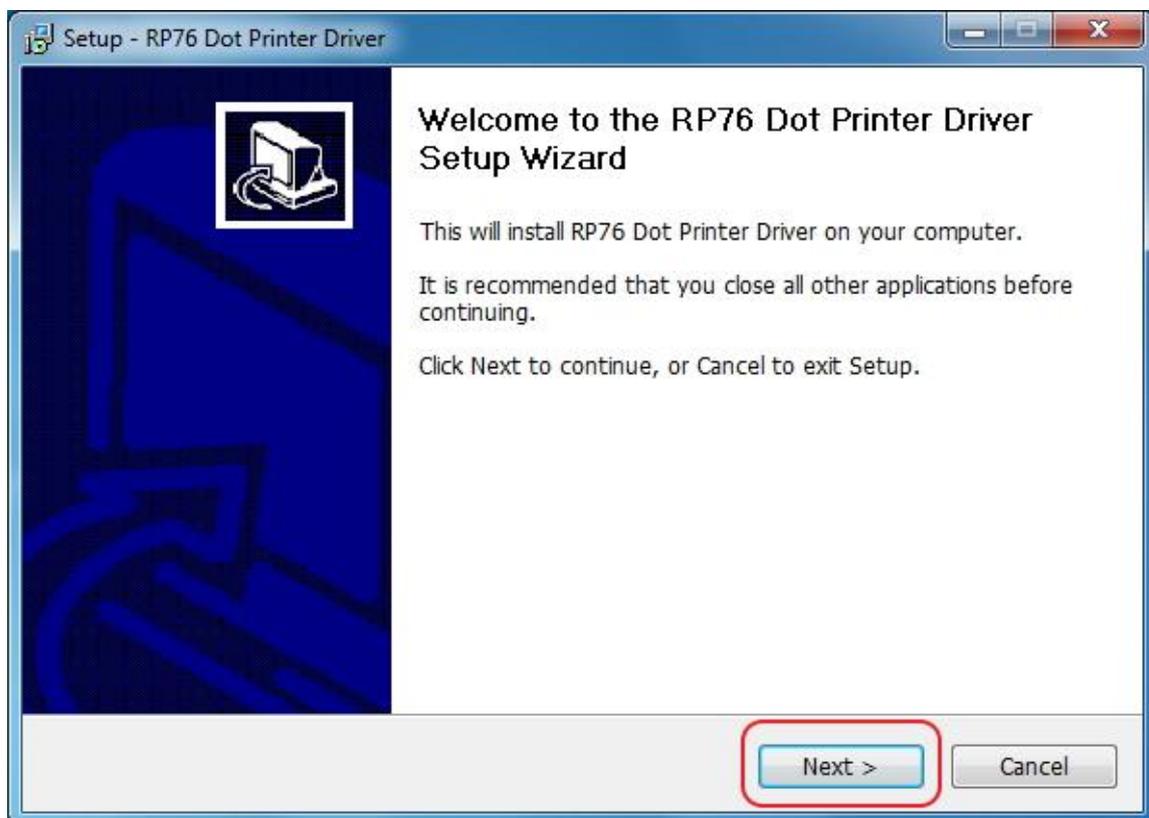


Then click "NEXT".

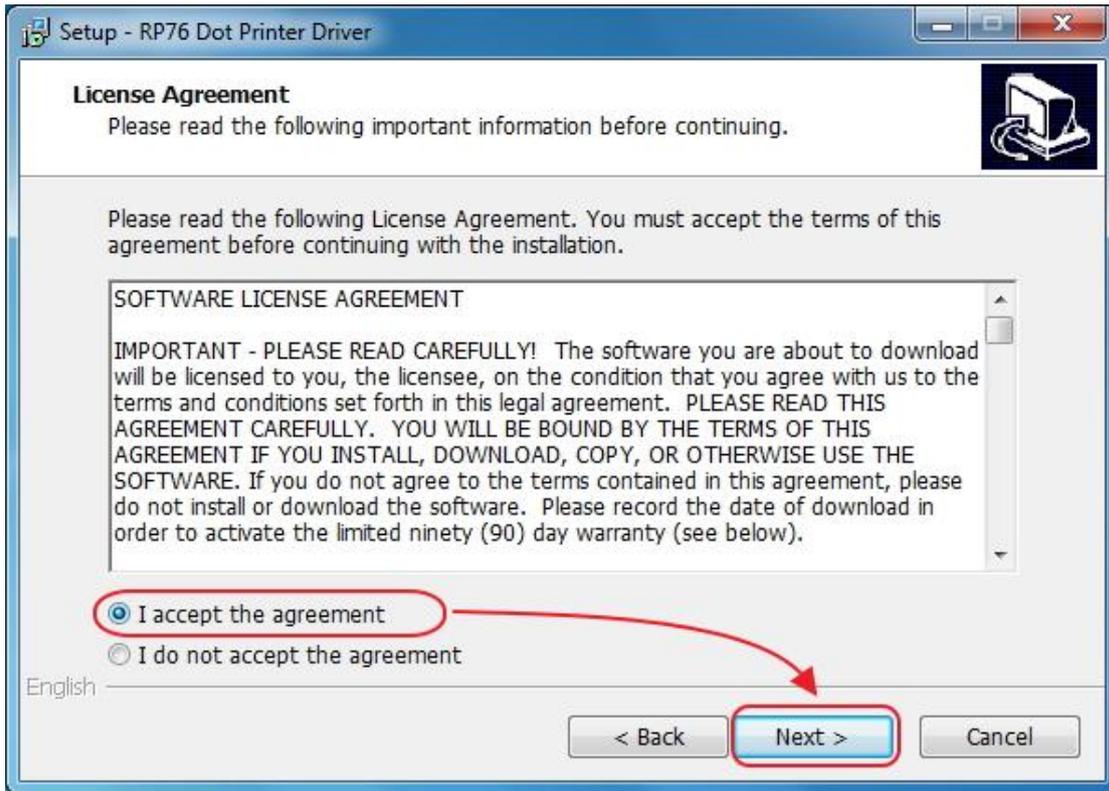


Please read carefully the license Agreement, and then click “I accept the agreement”

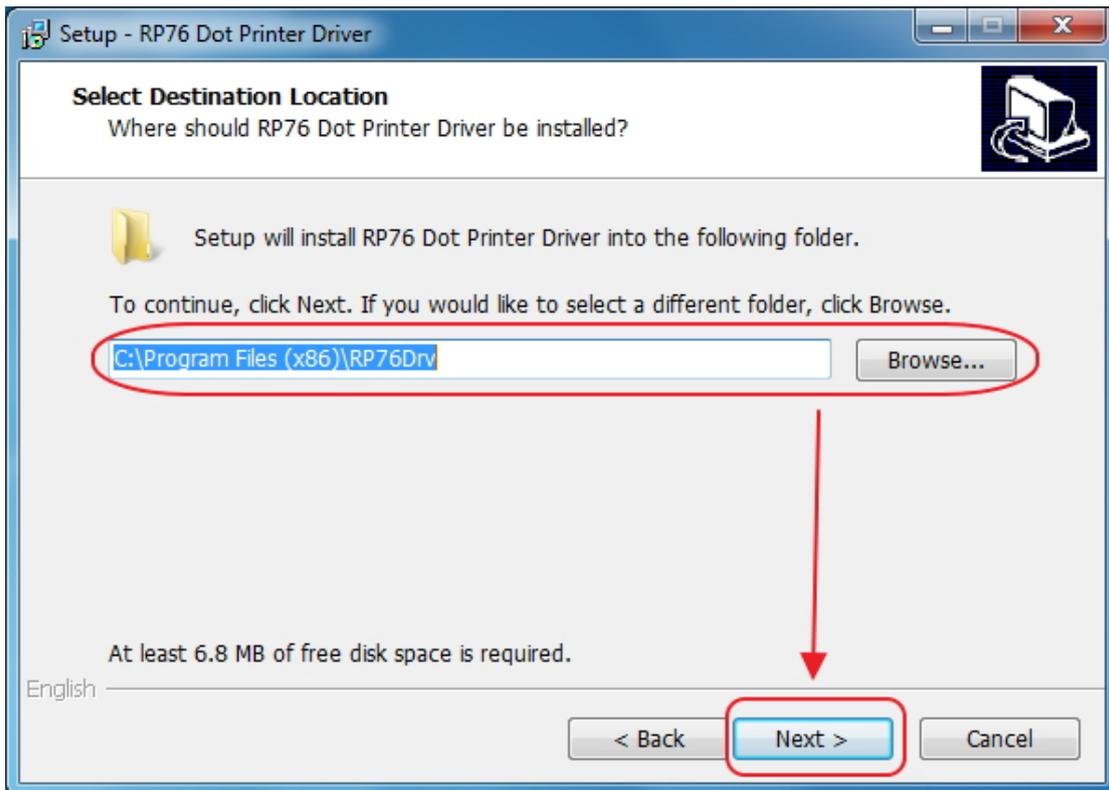


The driver is installed by default on a assigned folder of C disk (recommended). If you want to change the installation location, please click "Browse" to select the location. Then, click "Next"

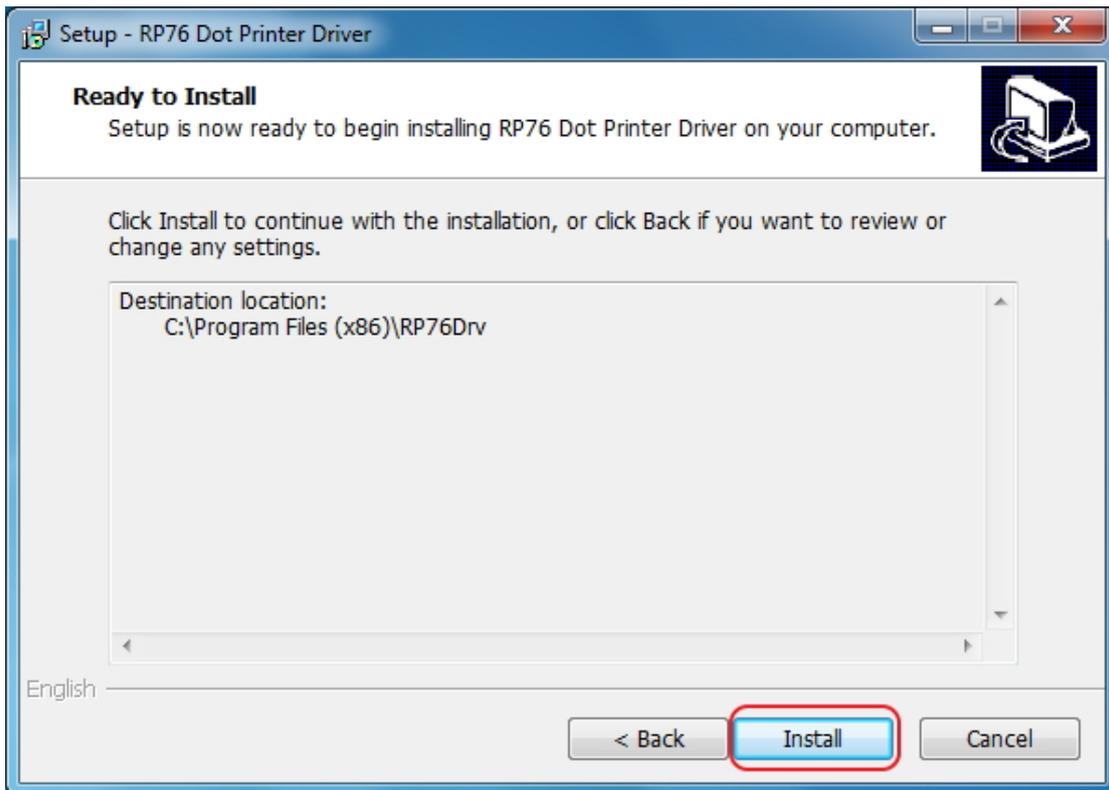

Click "Install"

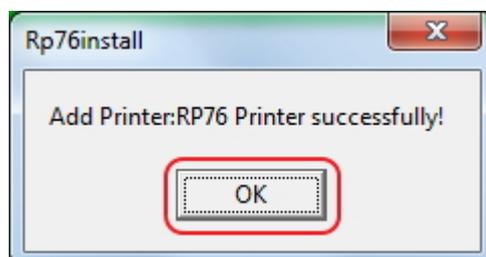


Wait till it shows the above picture, it means, the printer driver has been installed successfully, and then click "OK"

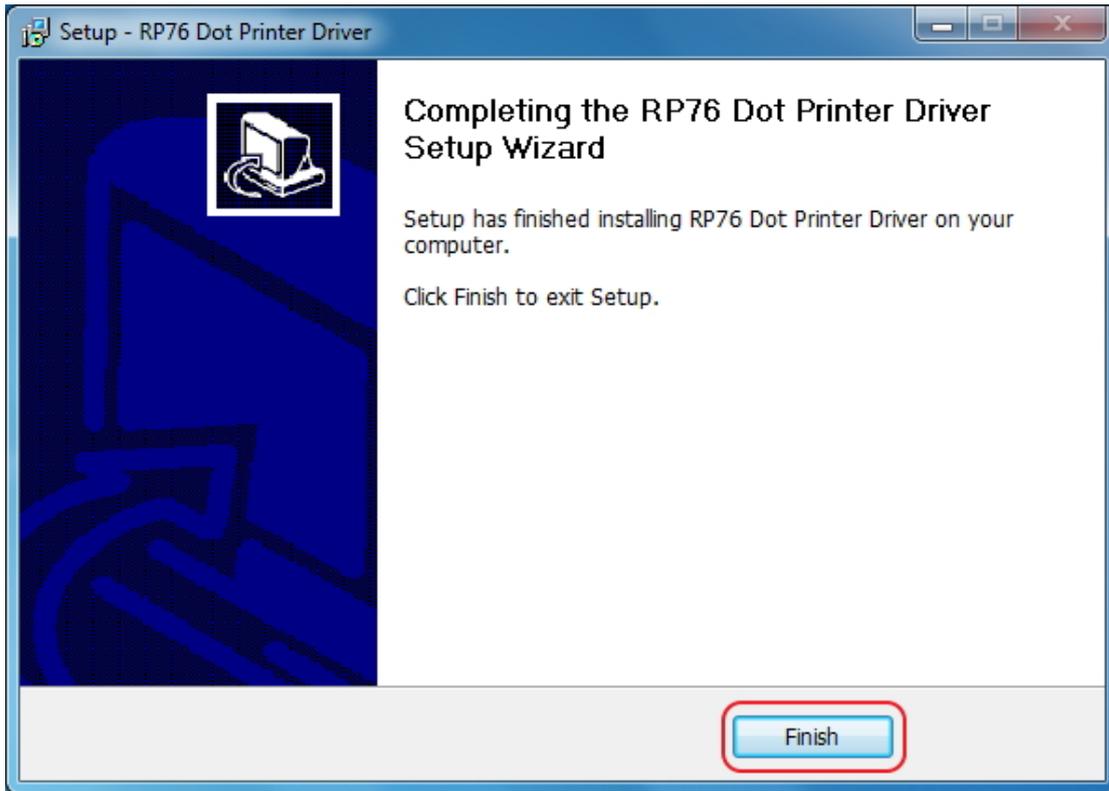

Click "Finish" to finish driver installation.

二、Printer Setup and Testing

1、Setup Printer Properties

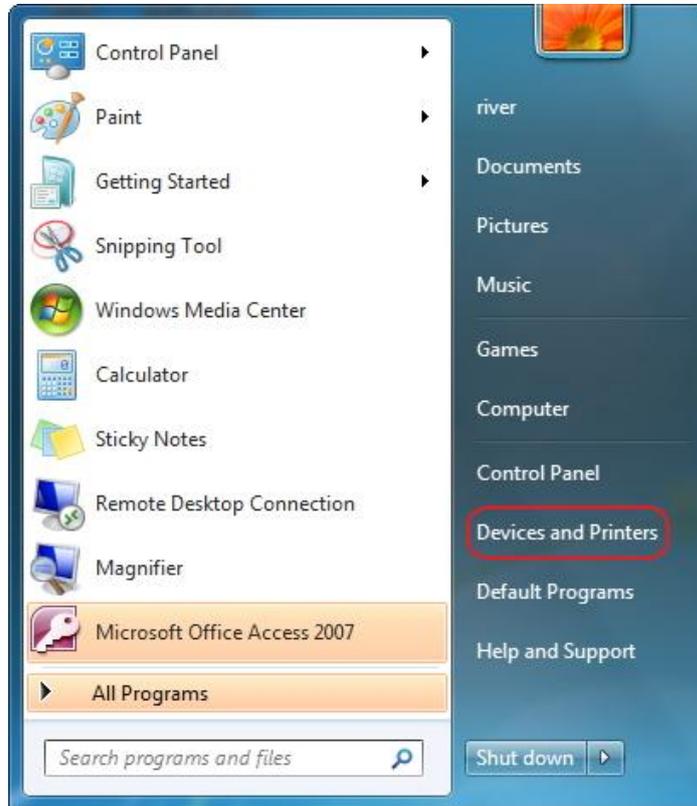


Click Start Menu, and then click "Devices and Printers", just as above picture



Right-Click "RP76 Printer", and then click "Printer properties"

And then, it will show as below picture:

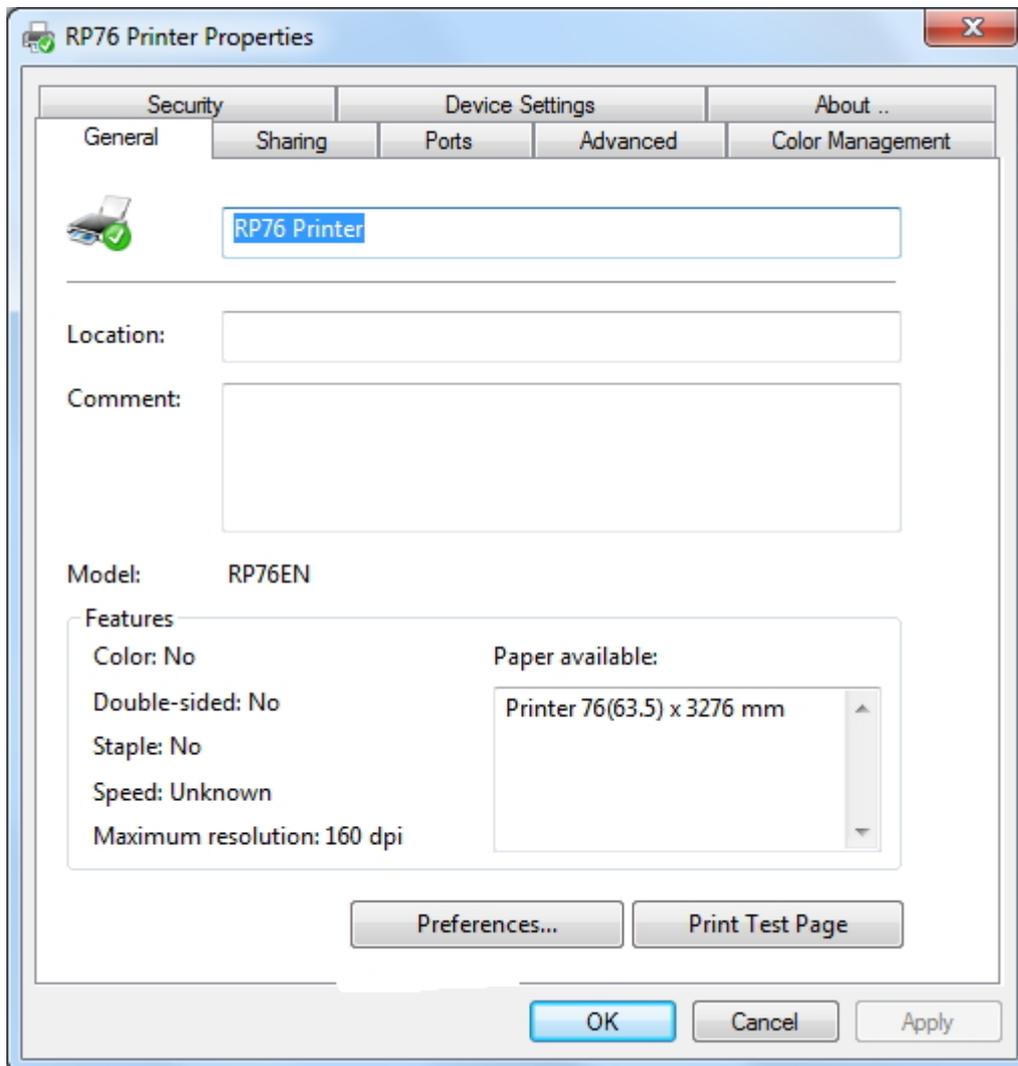


On RP76 Printer Properties “General”, you could configure the printer communication port, such as Serial port, Parallel port and USB port. You also could set the paper specification, beeper etc.


After all the setting, you could start to print the testing page.

2、Serial Port Configuration

On RP76 Printer Properties “Ports”, you could configure the Serial Port to Communicate printer to computer, see the below picture:

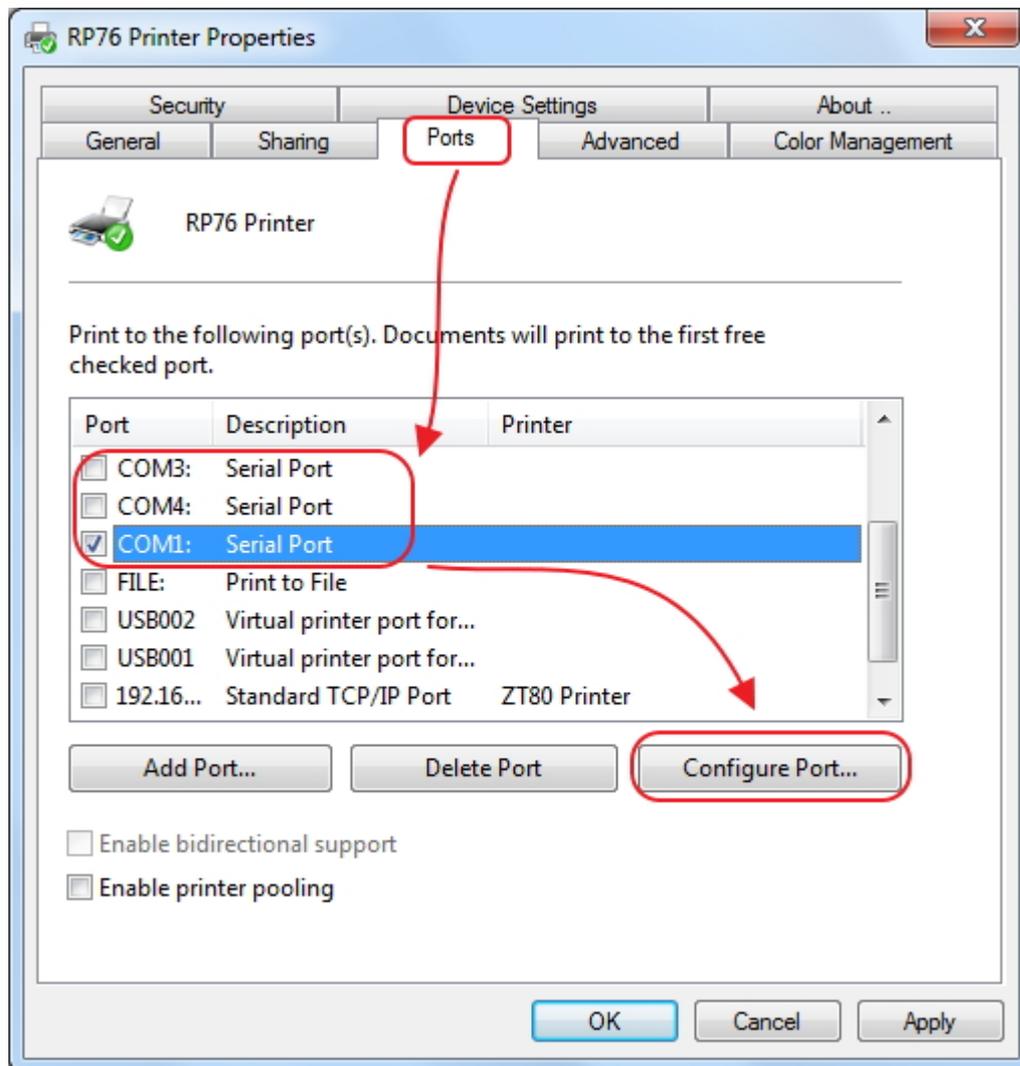

Select available computer COM port, such as "COM1" as the above picture, and then click "Configure Port" to set the detailed parameter.

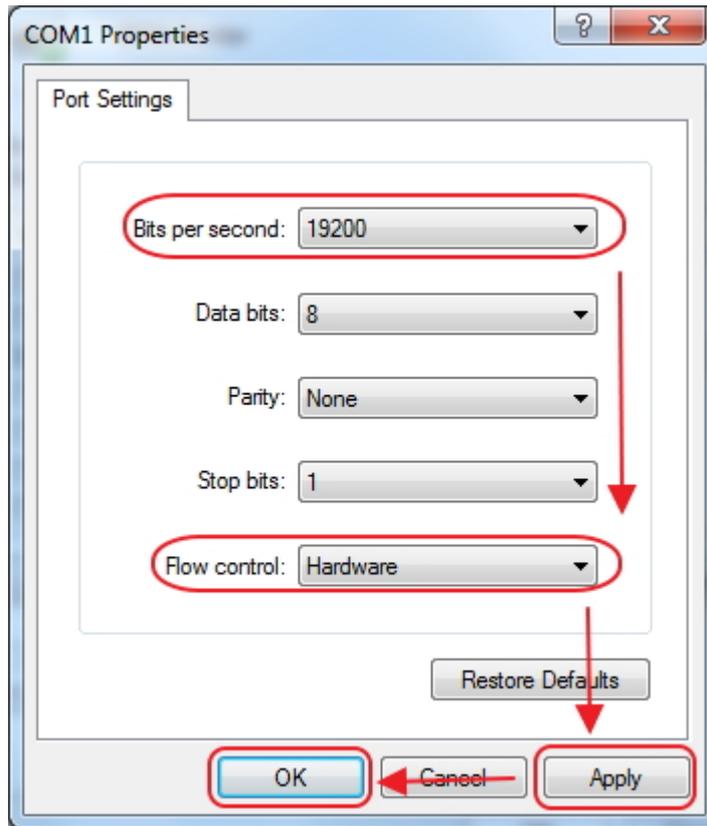


"Bit per second" means Serial port baud rate, it must same as printer setting. For example, if printer baud rate is "19200bsp", then you must select "19200" on "Bit per second", just as above picture. (Factory default baud rate is 9200bps)

"Flow control", we recommend select "Hardware"


After setting, click "Apply", and then click "OK".

When it shows as below picture, click "Apply" to finish Serial Port Configuration.

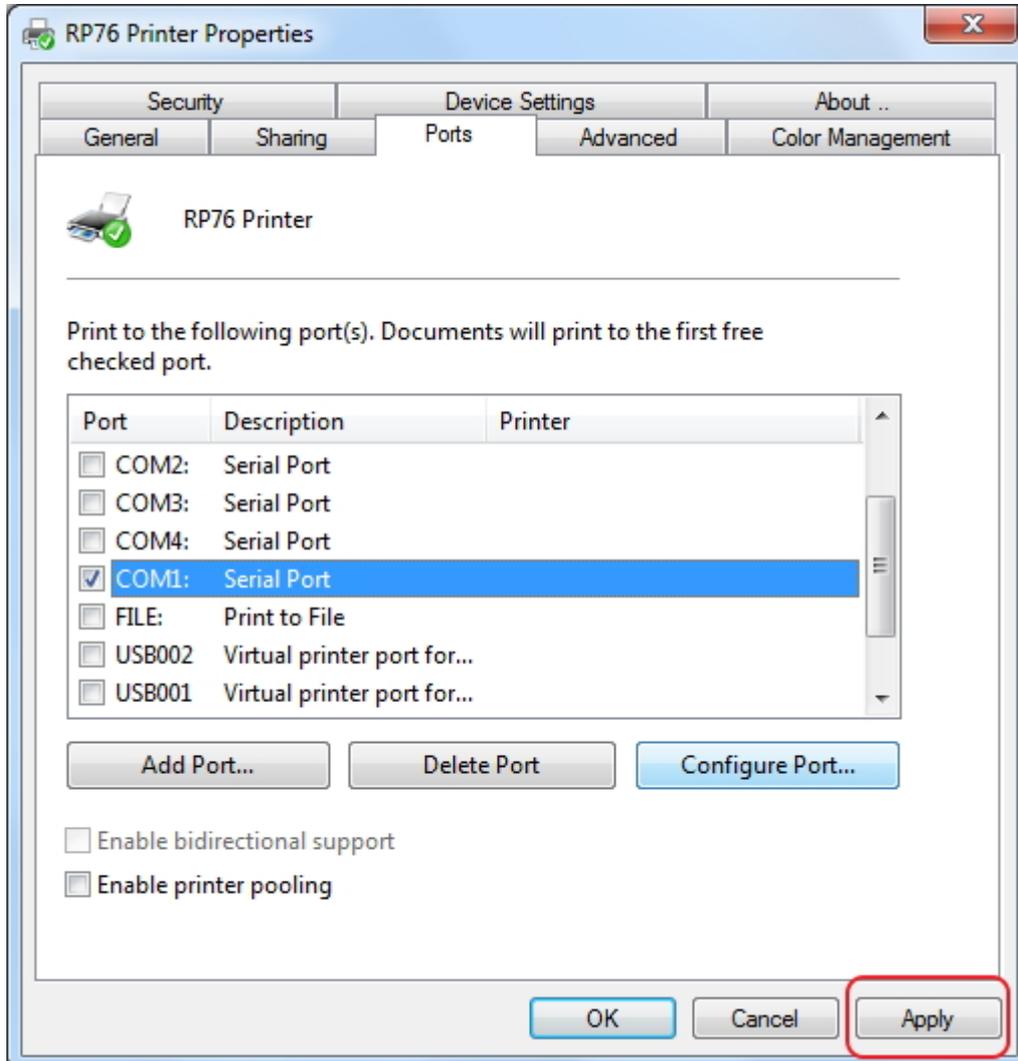

3、 Parallel Port Configuration


On RP76 Printer Properties “Ports”, you could configure the Parallel Port to communicate printer to computer, see the below picture:

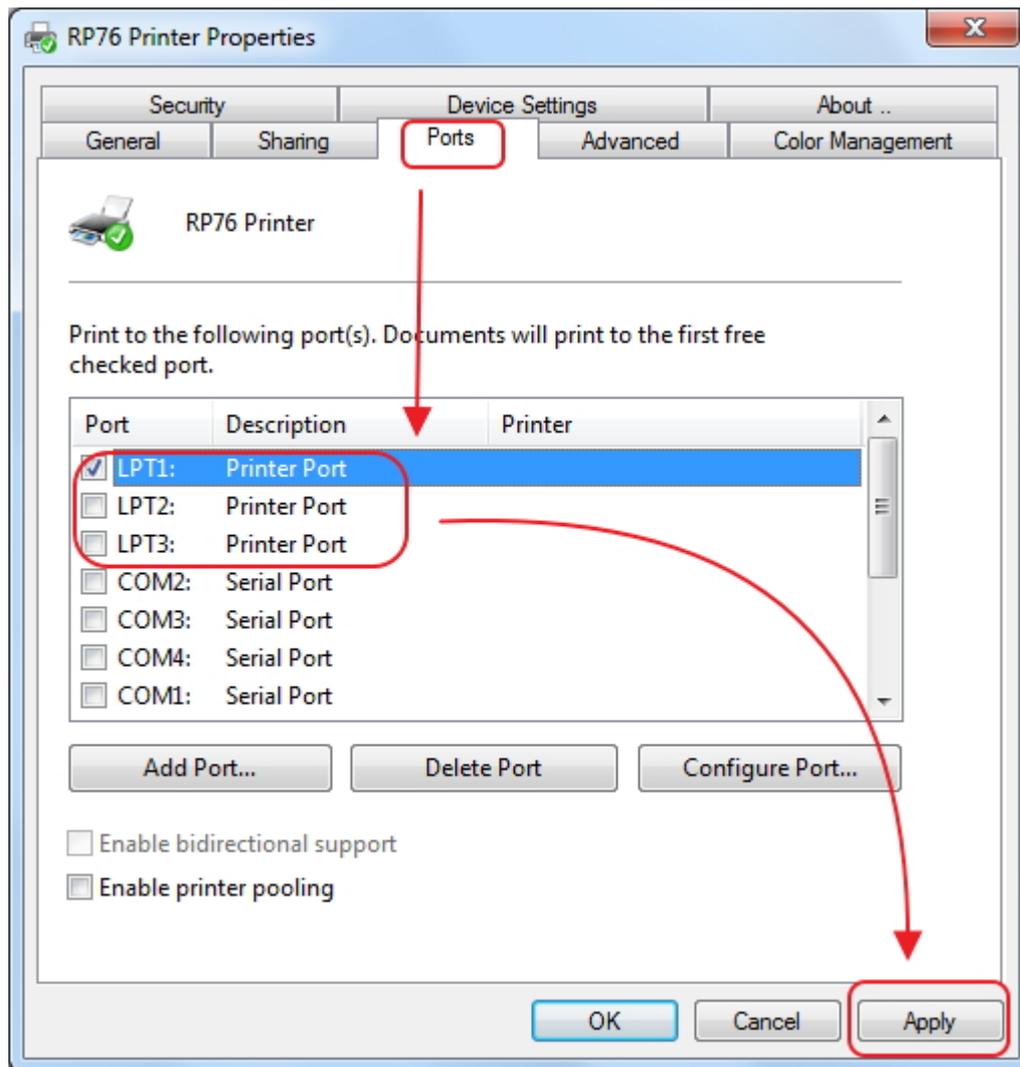

Select available computer LPT port, such as the above picture shows “LPT1”, then click “Apply” to finish the configuration.

4、USB Port Configuration

On RP76 Printer Properties “Ports”, you could configure the USB Port to communicate printer to computer, see the below picture:

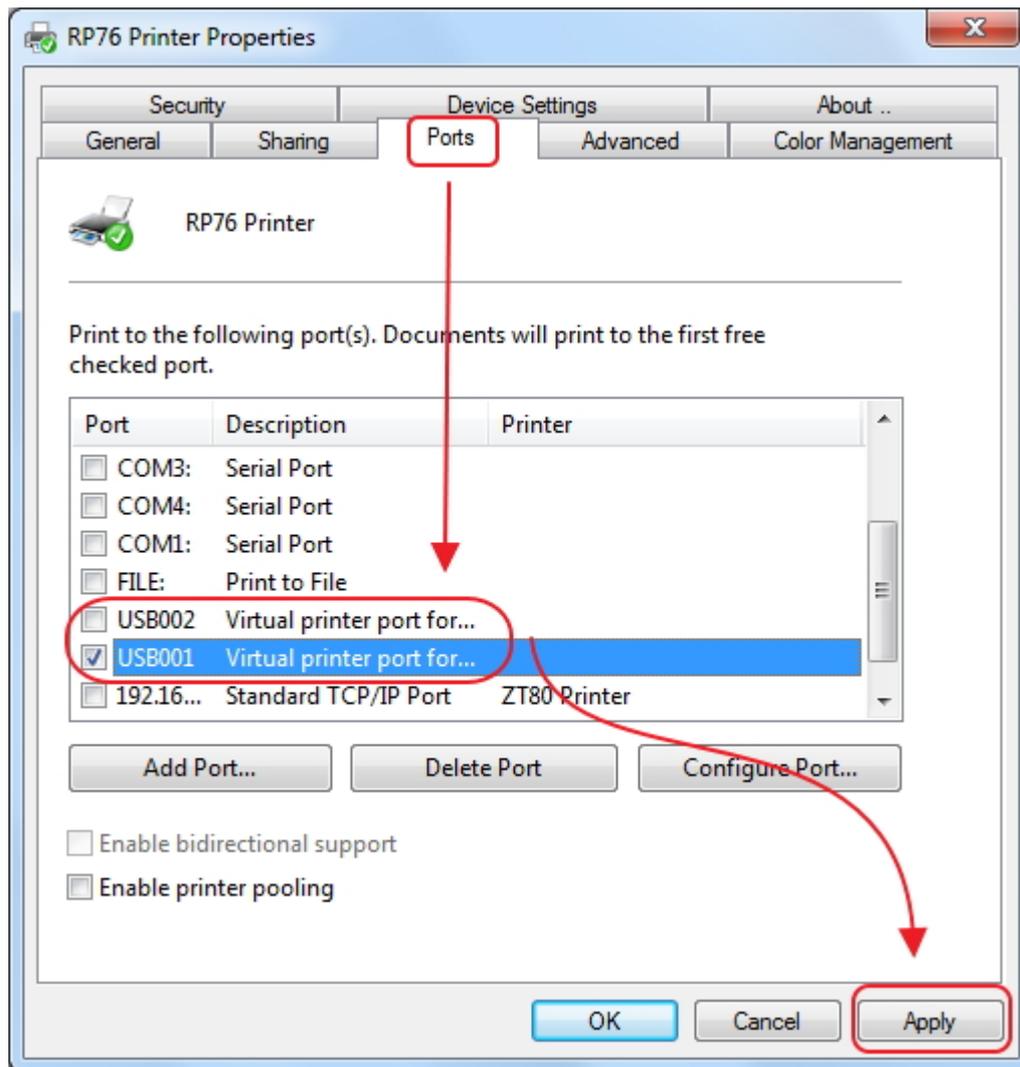


Select available computer USB communication port, such as the above picture shows “USB001”, and then click “Apply” to finish the configuration.

5、Printing Test Page

After finishing port configuration, we start to print test page.


On RP76 Printer Properties “General”:


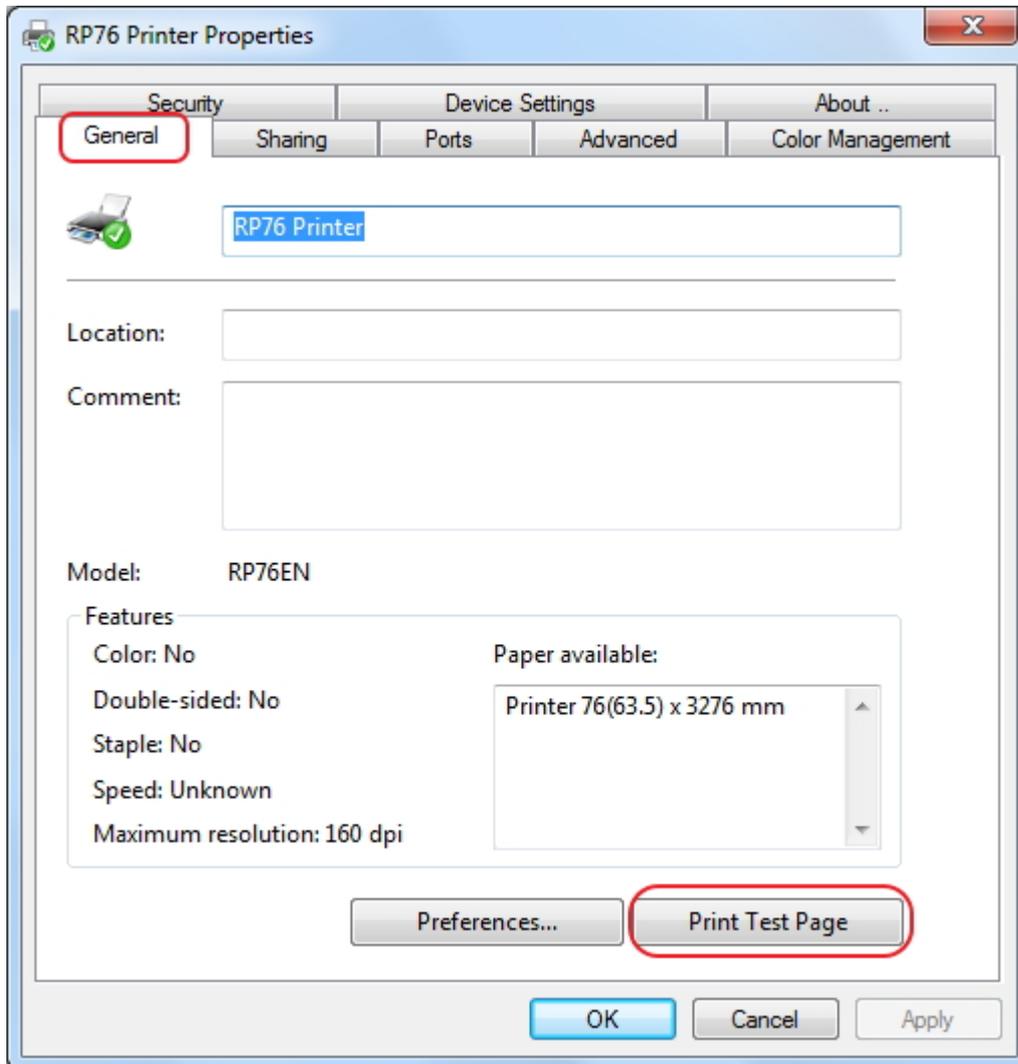


Click “Print Test Page”, the printer will print test page, which means the printer has been connected with computer successfully and the port configuration is correct.

6、 Other Properties and Function Configuration

You could set the paper specification etc., please refer to the follows:

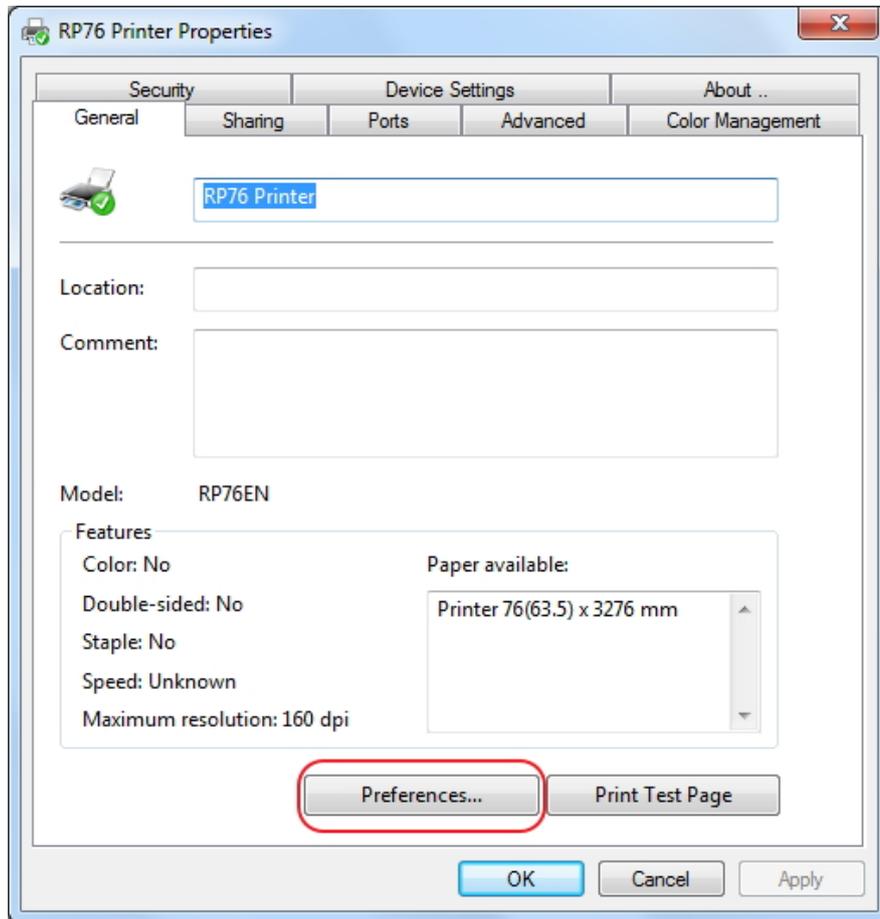

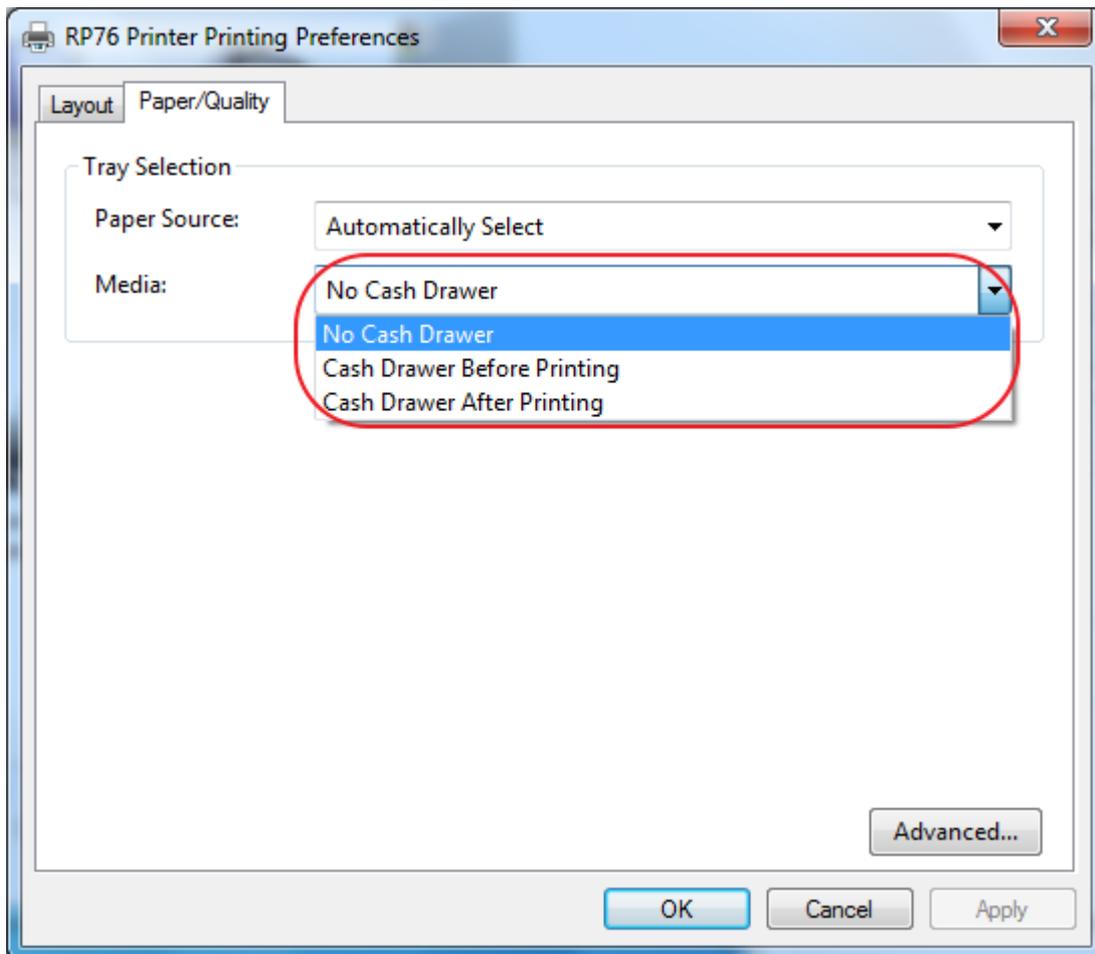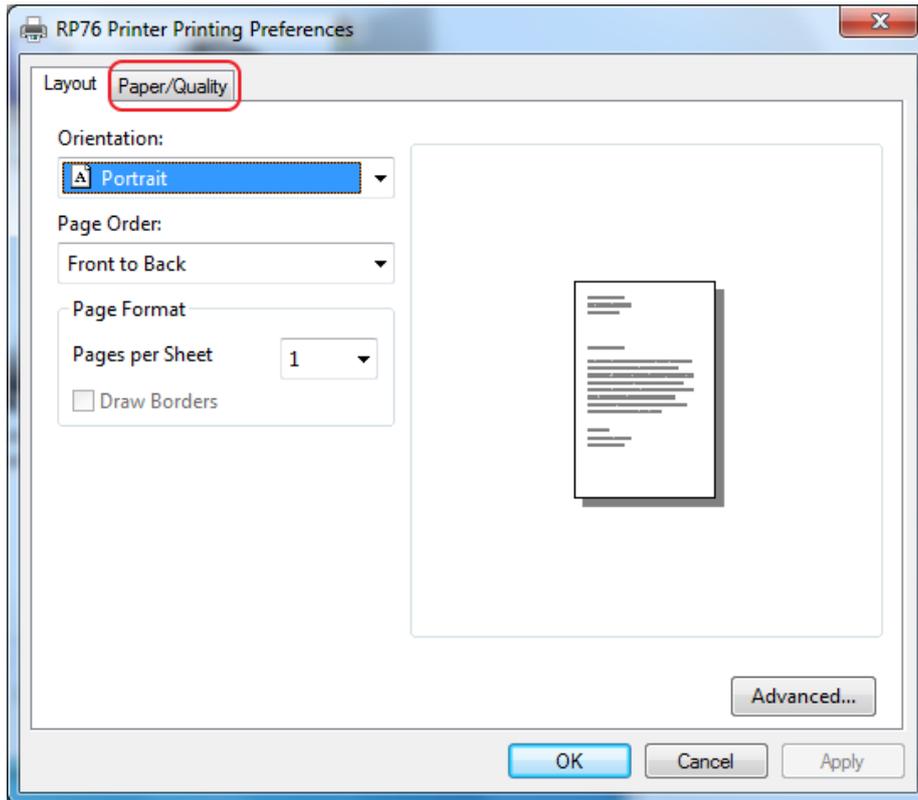



Cash Drawer Setting:

No Cash Drawer: Cash Drawer is not connected

Cash Drawer Before Printing: Open cash drawer before printing

Cash Drawer After Printing: Open cash drawer after printing

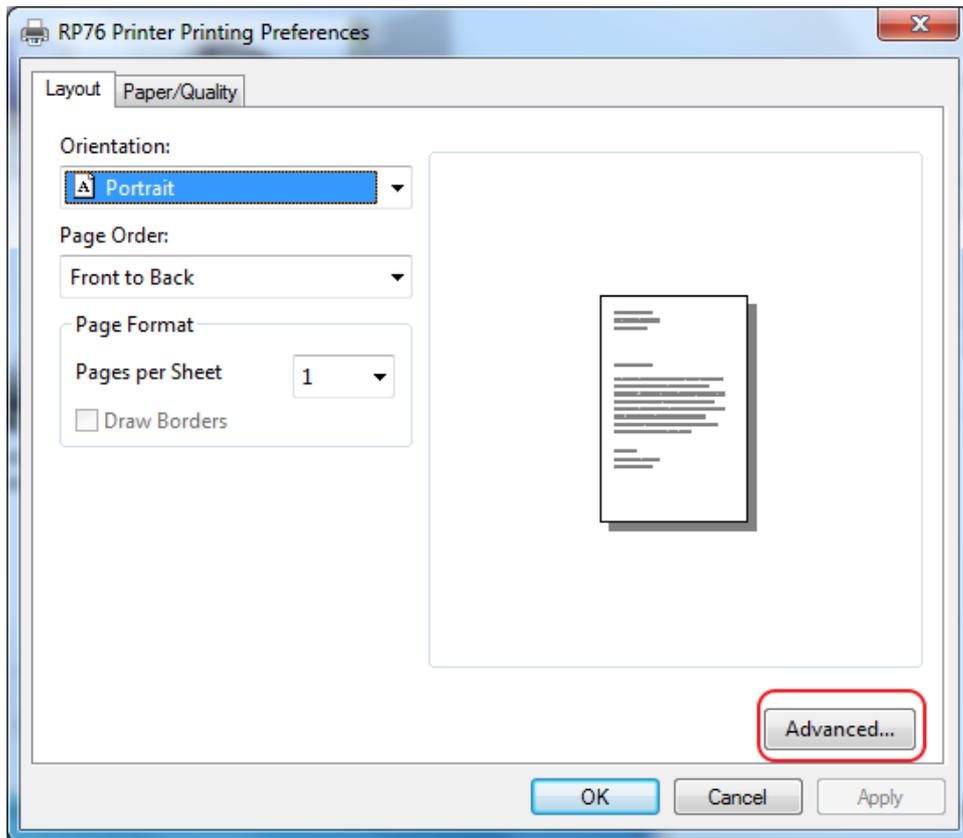

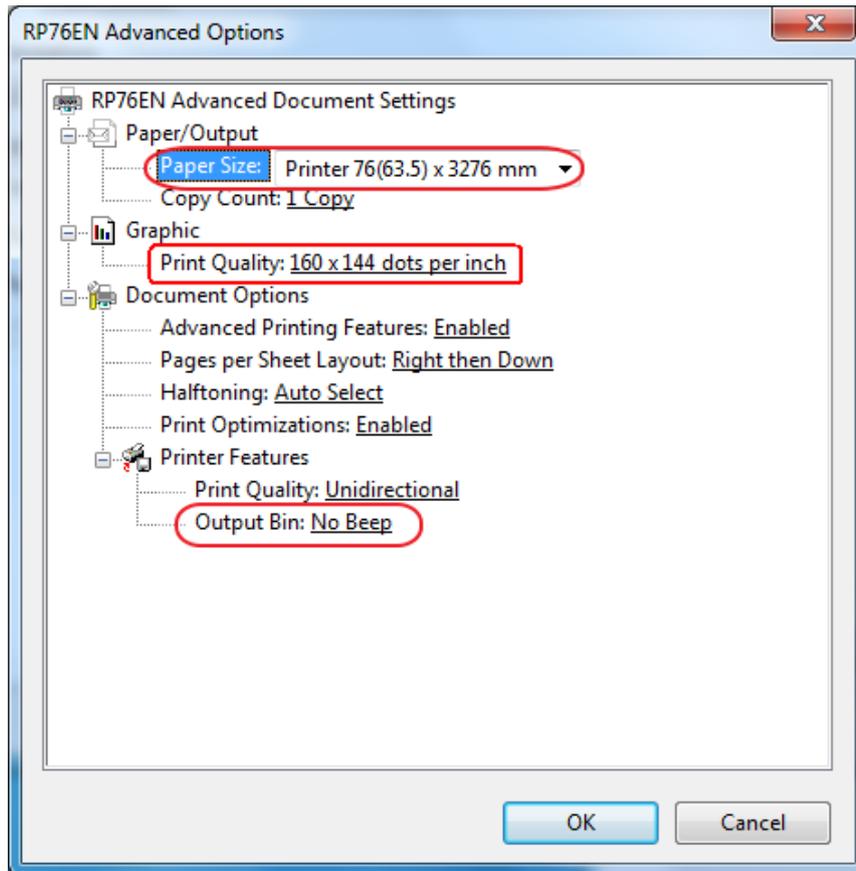

Paper Size:

- 1、 76 x 210 mm
- 2、 76 x 297 mm
- 3、 76 x 3276 mm

Print Quacity:

- 160 x 144 dot per inch
- 160 x 72 dot per inch
- 80 x 144 dot per inch

Output

Bin

:

No Beep: the buzzer don't prompt

[Form]Beep After Printing : Buzzer prompt after finishing printing each page

[Form]Beep Before Printing : Buzzer prompt before printing each page

[Report]Beep After Printing: Buzzer prompt after finishing printing each file

[Report]Beep Before Printing: Buzzer prompt before printing each file